


FUSE BOX (WITHOUT REAR VENT)

00F-1a

F-01
MAIN FUSE BLOCK

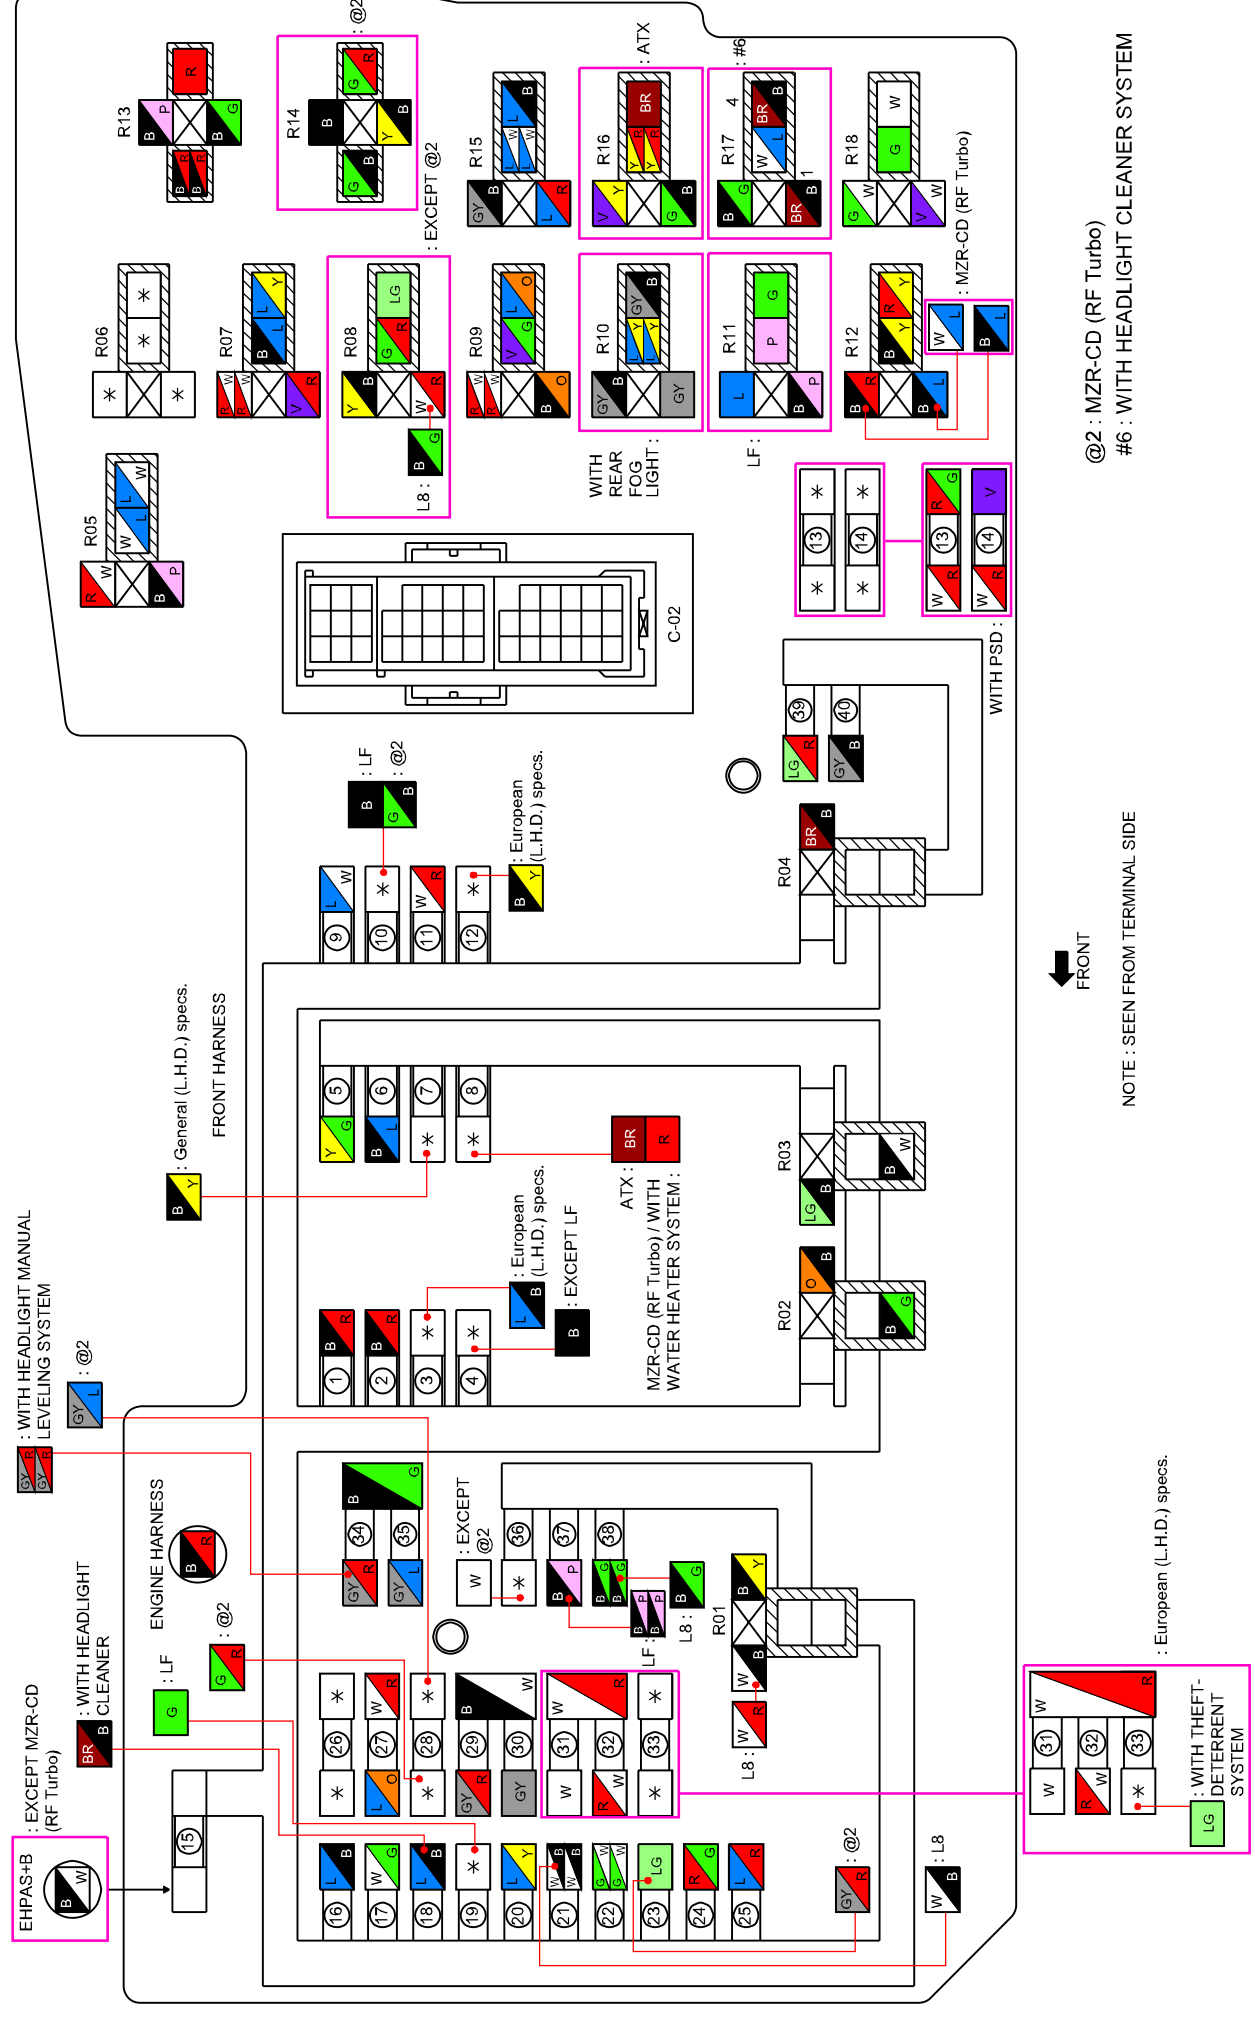

NOTE : SEEN FROM TERMINAL SIDE

@2 : MZR-CD (RF Turbo)
#6 : WITH HEADLIGHT CLEANER SYSTEM

FUSE BOX (WITHOUT REAR VENT)

00F-1b

F-01
MAIN FUSE BLOCK

FRONT HARNESS

NO.	FUSE NAME	FUSE	NO.	FUSE NAME	FUSE
①	FAN	30A	⑳	ENG+B	10A
②	FAN	30A	㉑	STOP	10A
③	<P.WIND>	<40A>	㉒	FUEL	20A
④	<IG KEY1> {INJ}	<30A>	㉓	HAZARD	10A
⑤	ABS-V	20A	㉔	ROOM	15A
⑥	ABS-P	30A	㉕	*	*
⑦	<IG KEY2>	<20A>	㉖	MAG	10A
⑧	HEATER {DEICER} TCM	<20A>	㉗	<GLOW SIG>	<7.5A>
⑨	BLOWER	40A	㉘	HEAD HR	10A
⑩	@IG KEY1 GLOW	40A	㉙	HEAD HL	10A
⑪	BTN	60A	㉚	HORN	15A
⑫	<IG KEY2>	<40A>	㉛	<SUN ROOF>	<20A>
⑬	[CLOSER LH] <P.SLIDE LH>	<20A>	㉜	[MIRROR] <BURGLAR>	<7.5A>
⑭	[CLOSER RH] <P.SLIDE RH>	<20A>	㉝	HEAD LR	15A
⑮	<EHPAS>	<80A>	㉞	HEAD LL	15A
⑯	FOG	15A	㉟	<ENG BAR2>	<15A>
⑰	D.LOCK	20A	㊱	ENG BAR	15A
⑱	#7P.WIND H/CLEAN	<20A>	㊲	INJ @ENG BA	20A
㉑	<ETC>	<10A>	㊳	ILLUMI	10A
㉒	DEFOG	25A	㊴	TAIL	10A

NO.	RELAY NAME
R01	MAIN RELAY PCM CONTROL RELAY {EGI MAIN RELAY}
R02	HEADLIGHT LOW RELAY {HEAD LO RELAY}
R03	HEADLIGHT HIGH RELAY {HEAD HI RELAY}
R04	TNS RELAY {TAIL RELAY}
R05	BLOWER RELAY {BLOWER RELAY}
R06	* {INJ RELAY}
R07	REAR WINDOW DEFROSTER RELAY {DEFOG RELAY}
R08	<FUEL PUMP RELAY> {CIRCUIT RELAY}
R09	A/C RELAY {A/C RELAY}
R10	<REAR FOG LIGHT RELAY> {R.FOG RELAY}
R11	<DRIVE-BY-WIRE RELAY> {ETC RELAY}
R12	STARTER RELAY {ST.RELAY}
R13	COOLING FAN RELAY {FAN RELAY}
R14	<GLOW RELAY> {GLOW RELAY}
R15	FRONT FOG LIGHT RELAY {F.FOG RELAY}
R16	<AT MAIN RELAY> {AT MAIN RELAY}
R17	<HEADLIGHT CLEANER RELAY> {H/CLEAN {DEICER} RELAY}
R18	HORN RELAY {HORN RELAY}

#6 : WITH HEADLIGHT CLEANER SYSTEM
 #7 : General (L.H.D) specs.
 {} : NAME INDICATED ON FUSE BOX COVER
 [] : NOT USED
 < > : IF EQUIPPED
 @ : LF
 & : MZR-CD (RF Turbo)
 : ATX
 	 : MZR-CD (RF Turbo) / WITH WATER HEATER SYSTEM