



## Mazda 3 Service Manual: Rear Seat Back Removal/Installation

1. Remove the rear seat cushion..
2. Remove the rear buckle installation bolt..
3. Fold the rear seat back.
4. Remove the bolts.

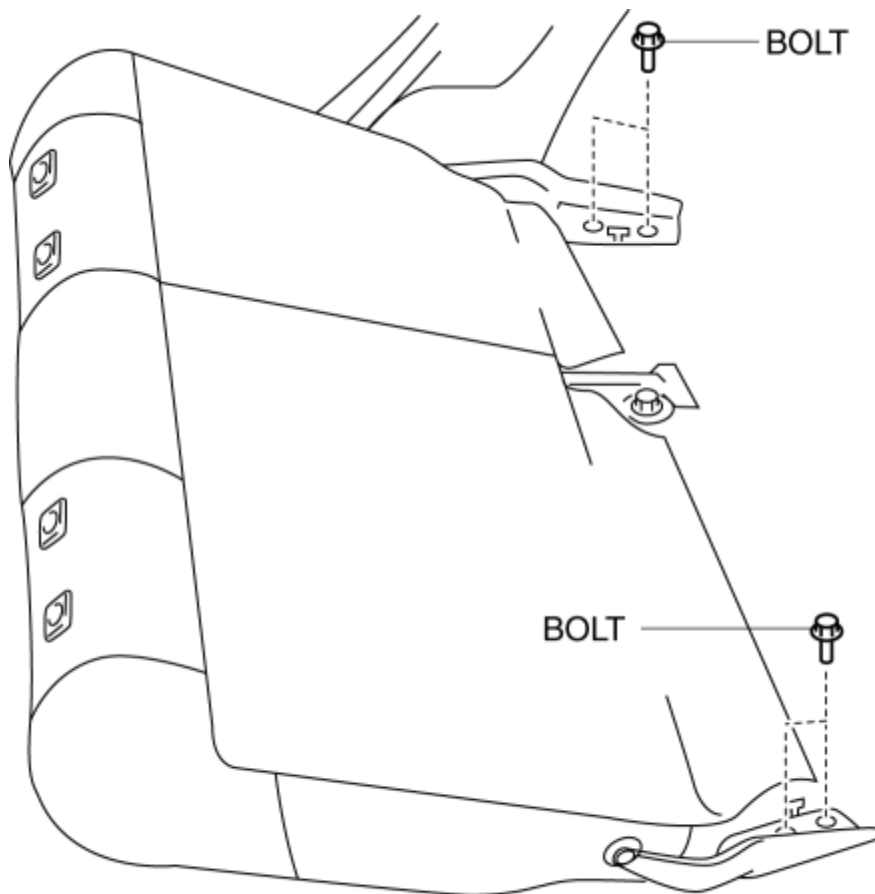


**BOLT : 37.3—52.0 N·m**  
**{3.8—5.3 kgf·m, 27—38 ft·lbf}**

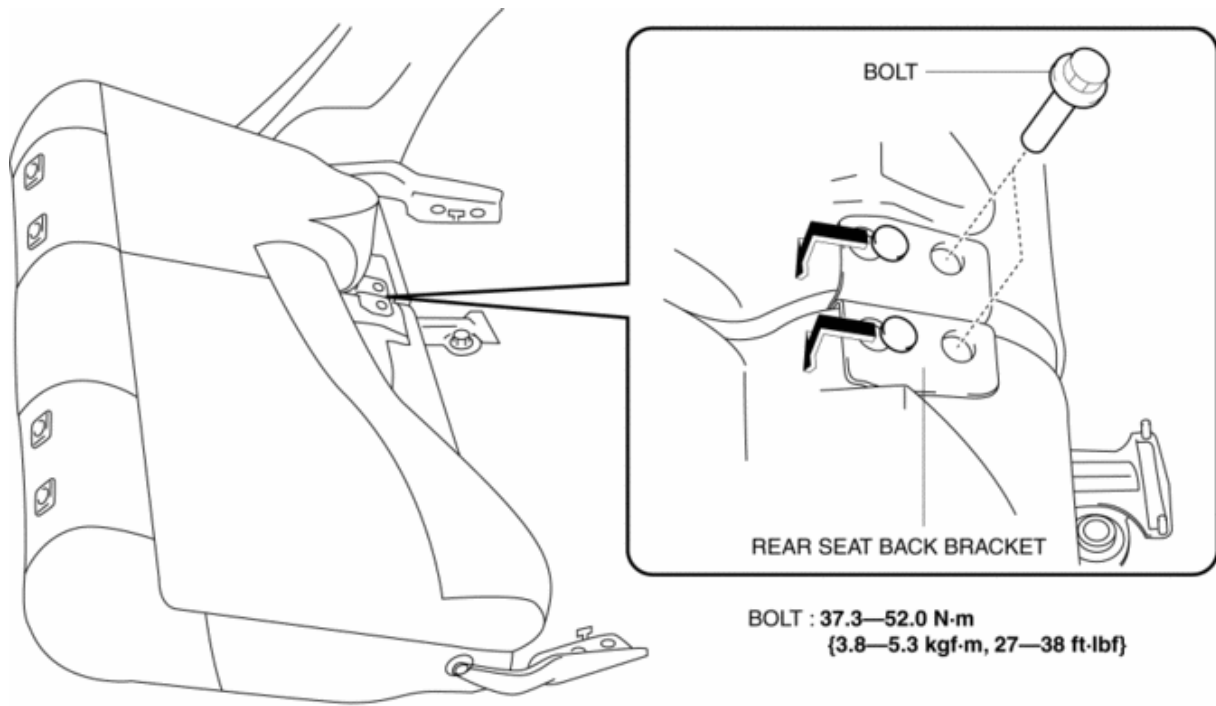

5. Remove the rear seat back from the rear seat back bracket by pulling the rear seat back in the direction of the arrow shown in the figure.


6. Remove the bolts, remove the hinge.

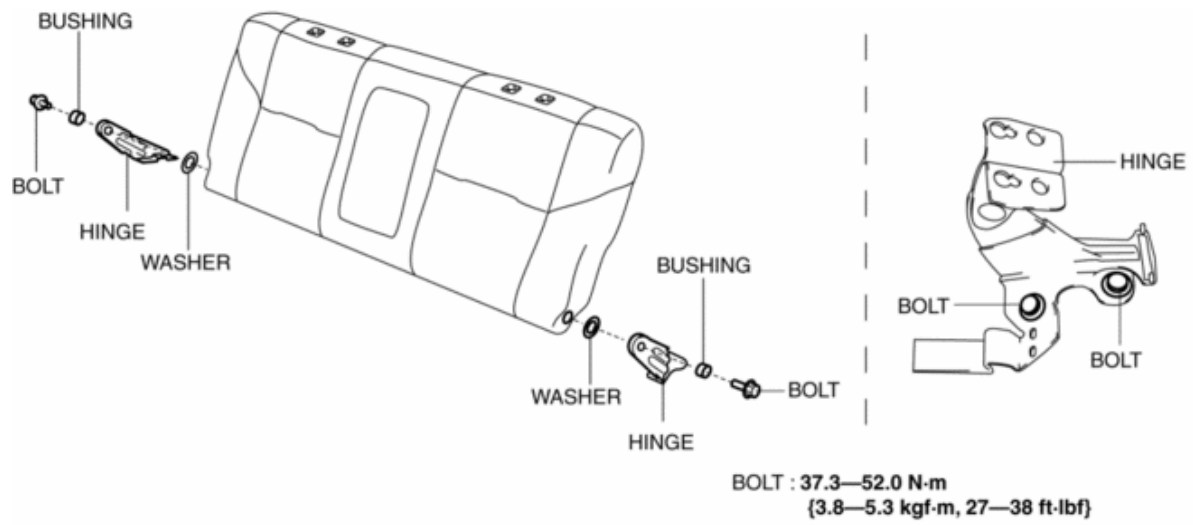

7. Install in the reverse order of removal.

## Mazda 3 Service Manual: Rear Seat Cushion Removal/Installation

1. Detach the hooks from the grommets by pulling the rear seat cushion in the order of (1), (2) in the direction of the arrow shown in the figure, while remove the wire.

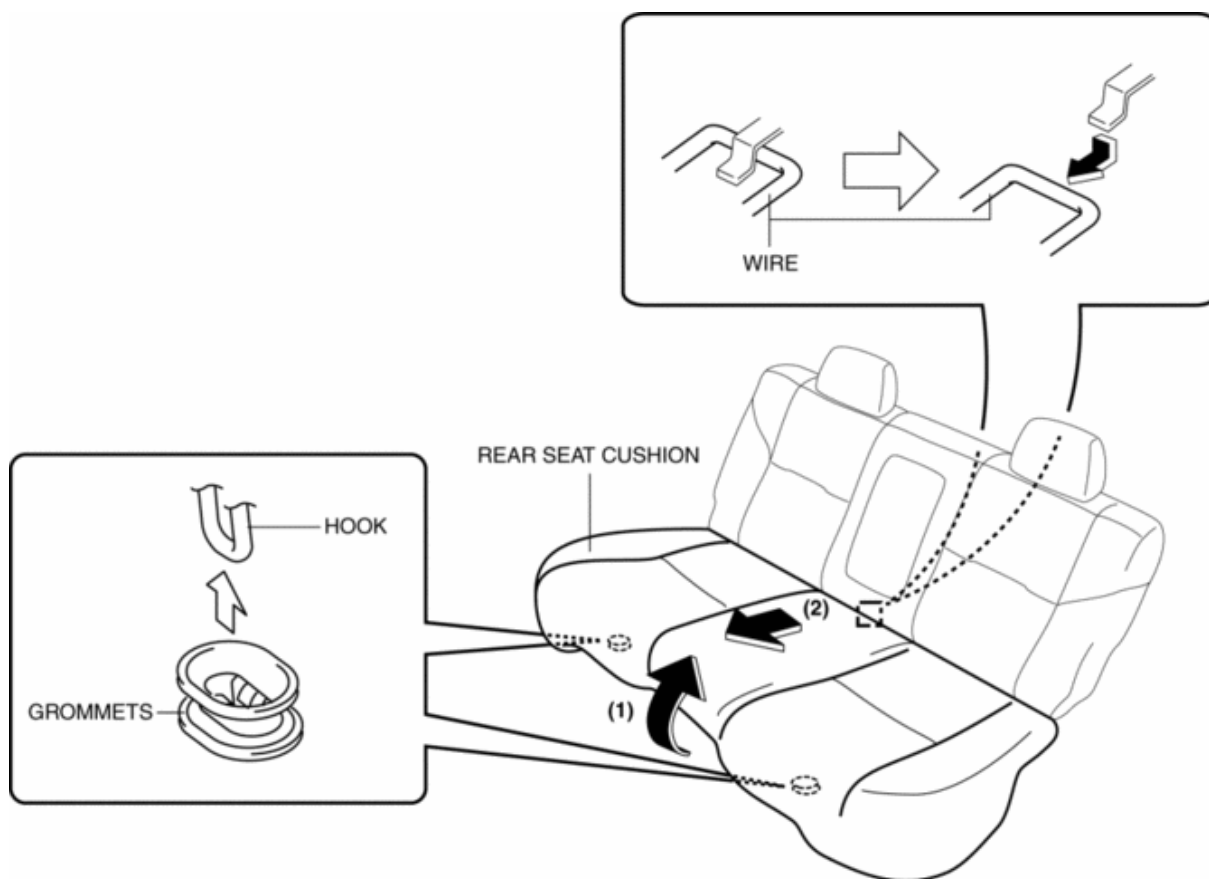

2. Install in the reverse order of removal.