


CONSOLE SIDE PANEL REMOVAL/INSTALLATION

id091700606600


With Electric Parking Brake

1. Pull the cover in the direction of the arrow shown in the figure and detach the clips from the switch panel.

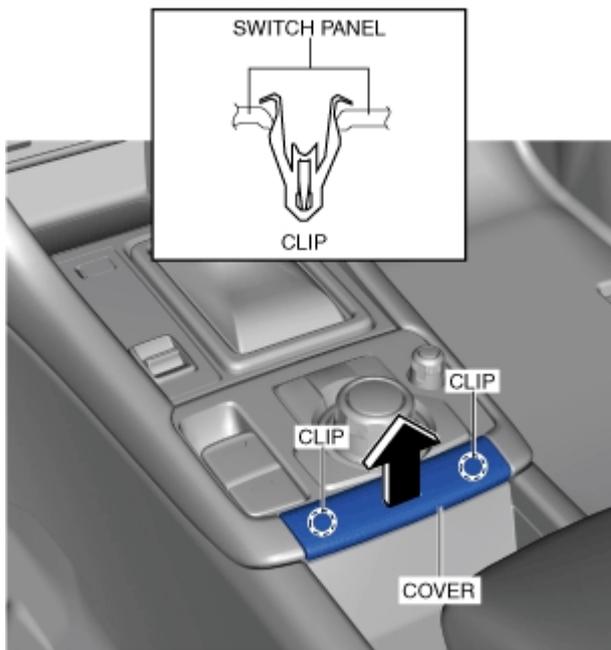

ac3uuw00002247

2. Move the console side panel in the order of arrows (1), (2) and (3), and remove it while detaching the hooks.

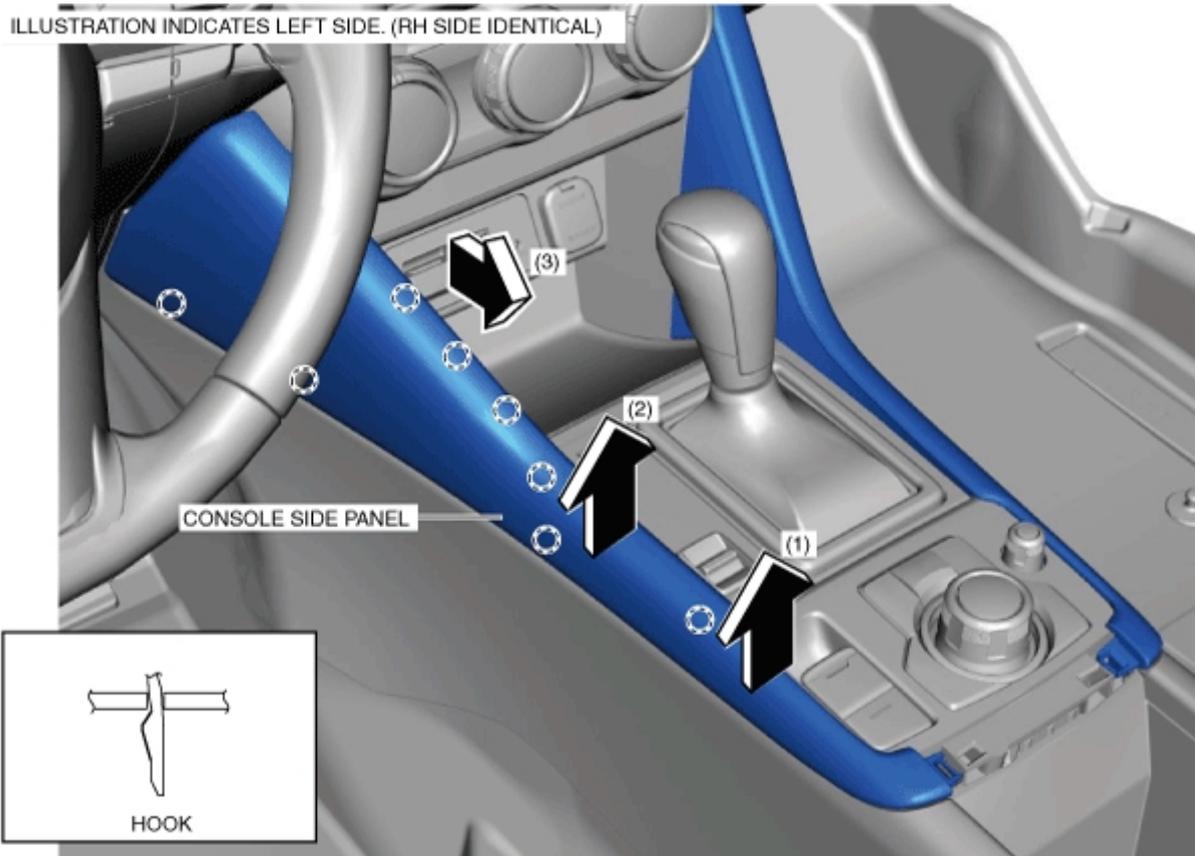



3. Install in the reverse order of removal.

Without Electric Parking Brake

Removal

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - (1) Center console tray (See [CENTER CONSOLE TRAY REMOVAL/INSTALLATION.](#))
 - (2) Shift bezel (See [SHIFT BEZEL REMOVAL/INSTALLATION.](#))
 - (3) Upper panel (See [UPPER PANEL REMOVAL/INSTALLATION.](#))
 - (4) Shift lever knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION \[C66M-R, C66MX-R\].](#))
 - (5) Selector lever knob (ATX) (See [AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION.](#))
 - (6) Shift panel (See [SHIFT PANEL REMOVAL/INSTALLATION.](#))
3. Pull the console side panel in the direction of the arrow shown in the figure and detach the clips and hooks from the front console.

ILLUSTRATION INDICATES LEFT SIDE. (RH SIDE IDENTICAL)

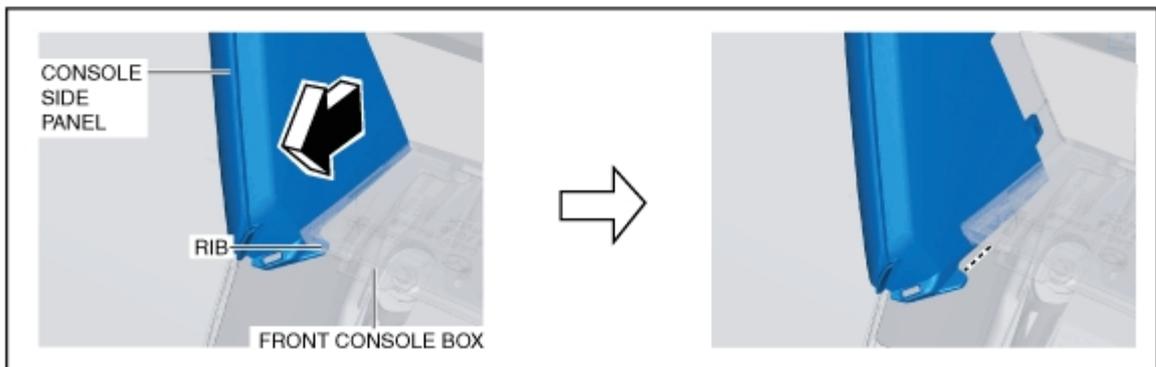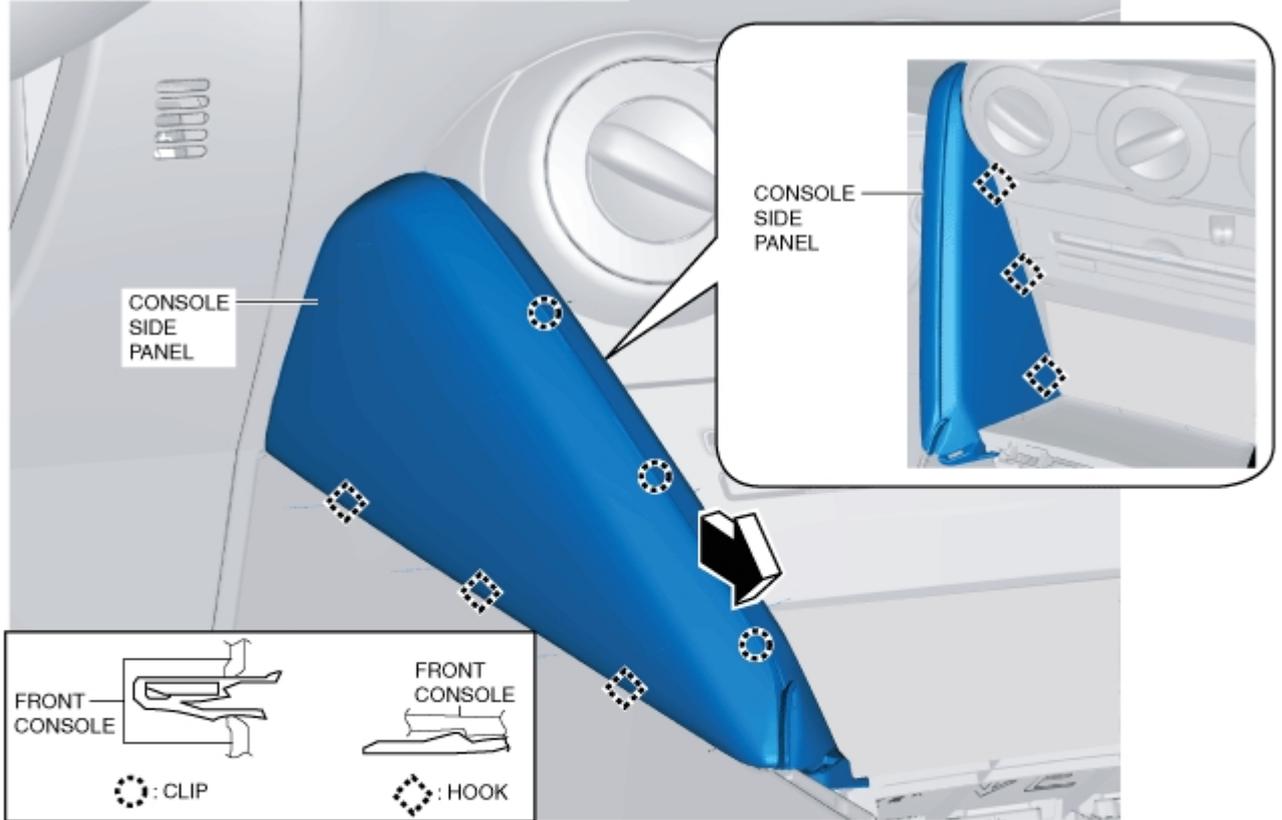


ac3uuw00002245


4. Pull the console side panel in the direction of the arrow shown in the figure and remove it while releasing the rib.

Installation

1. While inserting the console side panel rib into the clearance between the front console and the front console box, press in the console side panel in the direction of the arrow shown in the figure while fitting it to the front console box.

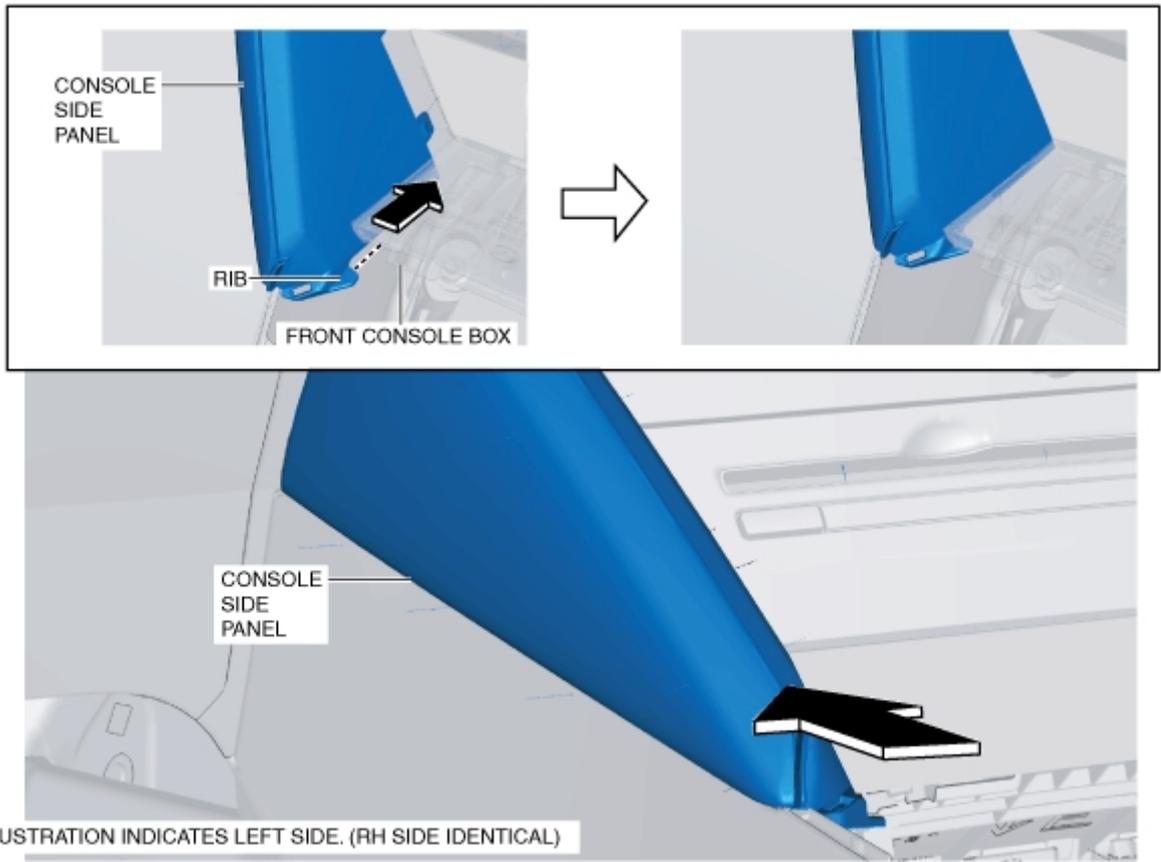

2. Align the installation positions of the clips and hooks, and install the console side panel in the direction of the arrow shown in the figure.

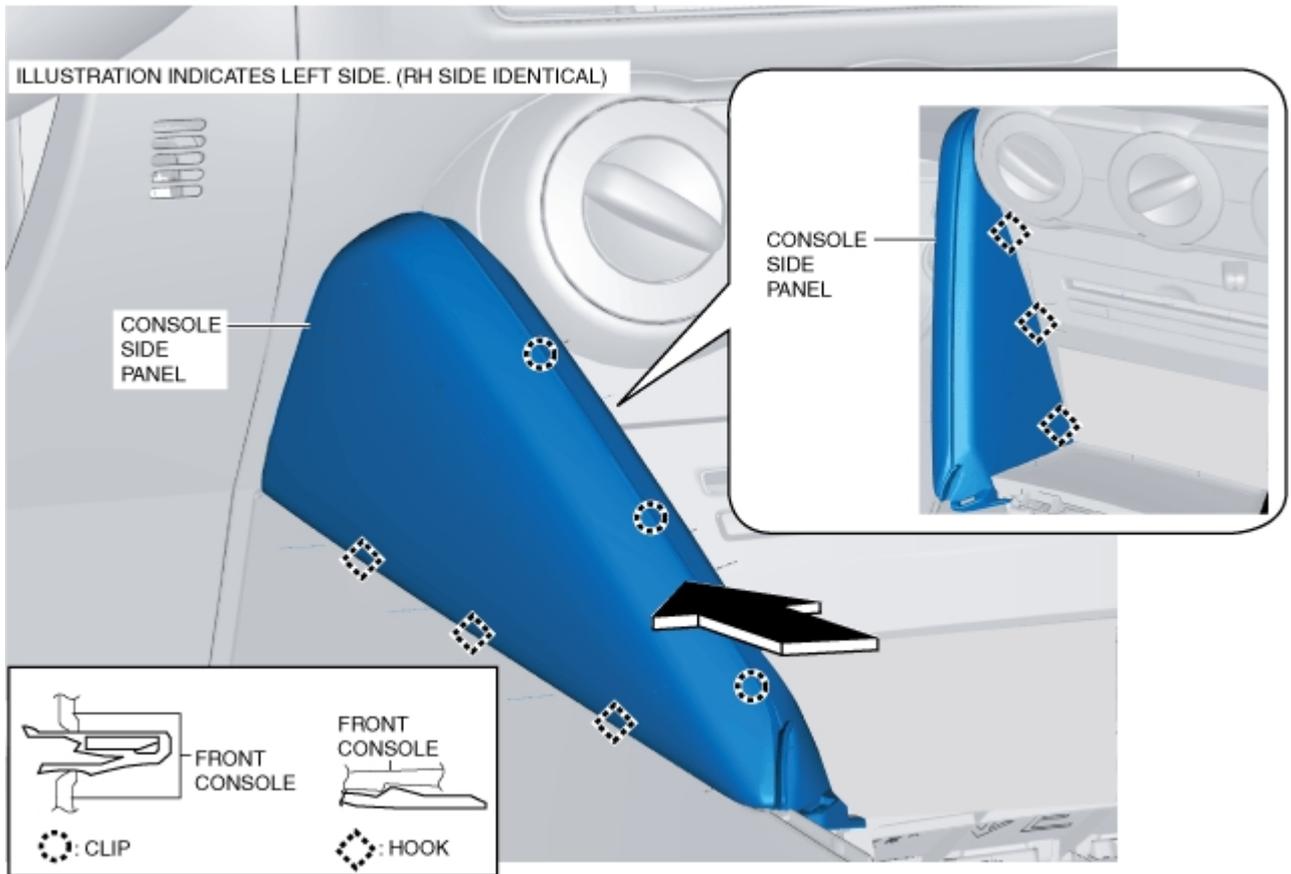

ac3uuw00002246

3. Install the following parts:

- (1) Shift panel (See [SHIFT PANEL REMOVAL/INSTALLATION.](#))
- (2) Selector lever knob (ATX) (See [AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION.](#))
- (3) Shift lever knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION \[C66M-R, C66MX-R\].](#))
- (4) Upper panel (See [UPPER PANEL REMOVAL/INSTALLATION.](#))
- (5) Shift bezel (See [SHIFT BEZEL REMOVAL/INSTALLATION.](#))
- (6) Center console tray (See [CENTER CONSOLE TRAY REMOVAL/INSTALLATION.](#))

4. Connect the negative battery cable. (See [NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.](#))