

VIN

or

Select Model ([https://am.mazdaserviceinfo.com/mazdagms3/index?page=contentresult&vin=&selectedYearRefKey=MAZDA3_2019&years=2019&models=MAZDA3\(BP\)&mWithCode=2019%20%20MAZDA3%20\(BP\)#id0913009126001](https://am.mazdaserviceinfo.com/mazdagms3/index?page=contentresult&vin=&selectedYearRefKey=MAZDA3_2019&years=2019&models=MAZDA3(BP)&mWithCode=2019%20%20MAZDA3%20(BP)#id0913009126001))

2019 MAZDA3 (BP)

[Go](#) [Reset](#)

SI Issue Date ▼ Service Info ▼ Manuals ▼ Other Manuals ▼

Clear ([https://am.mazdaserviceinfo.com/mazdagms3/index?page=contentresult&vin=&selectedYearRefKey=MAZDA3_2019&years=2019&models=MAZDA3\(BP\)&mWithCode=2019%20%20MAZDA3%20\(BP\)#id0913009126001](https://am.mazdaserviceinfo.com/mazdagms3/index?page=contentresult&vin=&selectedYearRefKey=MAZDA3_2019&years=2019&models=MAZDA3(BP)&mWithCode=2019%20%20MAZDA3%20(BP)#id0913009126001))

+ Bodyshop Manuals
+ Campaign
+ Engine Manual
+ MT Workshop Manual
+ Service Highlights
+ Technical Service Bulletin
+ Wiring Diagram
- Workshop Manuals
+ General Information
+ Engine
+ Suspension
+ DriveLine/Axle
+ Brakes
+ Transmission/Transaxl
+ Steering
+ HVAC
+ Restraints
- Body and Accessories
+ On-Board Diagnosti
+ Symptom
Troubleshooting
+ Body Panels
+ Doors and Liftgate
+ Glass/Windows/Mirror
- Seats
+ CHILD-RESTRAIN
SEAT ANCHOR
REMOVAL/INSTALL
+ FRONT SEAT BA
COMPONENT
REMOVAL/INSTALL
[(US)]
+ FRONT SEAT BA
FRAME
DISASSEMBLY/ASSE
[(US)]
+ FRONT SEAT BA
TRIM
REMOVAL/INSTALL
[(US)]
+ FRONT SEAT
CUSHION TRIM
REMOVAL/INSTALL
[(US)]
+ FRONT SEAT
REMOVAL/INSTALL
[(US)]
+ FRONT SEAT SID
COVER
REMOVAL/INSTALL
[(US)]
+ LIFT MOTOR
INSPECTION
+ LUMBAR SUPPO
MOTOR INSPECTIO

REAR SEAT CUSHION REMOVAL/INSTALLATION


SM2336412

S 1.3.1 (0322a) | 03/25/2020, 15:05:08 | Windows 7 | Chrome 80.0.3987.149 | 1049.965.1603.1709.1080.891
© 2020 Mazda North American Operations, U.S.A.

Caution

- When performing the procedure with a rear seat removed from the vehicle, perform the procedure on a clean cloth so as not to damage or soil the seat.


1. With the rear seat cushion lock lever moved in the direction of arrow (1) shown in the figure, lift up the rear seat cushion in the direction of arrows (2).

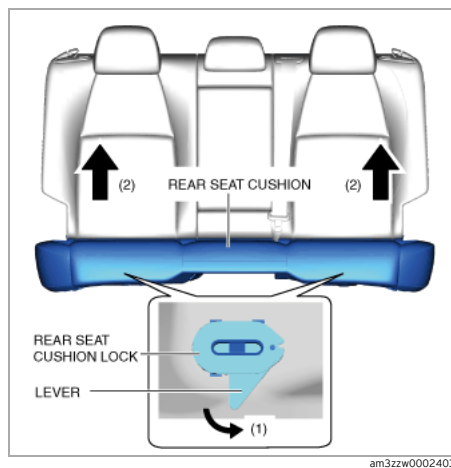

2. With the rear seat cushion lifted, insert your hand into the gap between the rear seat cushion and the rear seat back.

3. Remove the rear seat cushion end in the order of arrows (1) and (2) shown in the figure.

4. Move the rear seat cushion in the direction of arrow (3) shown in the figure and remove it.

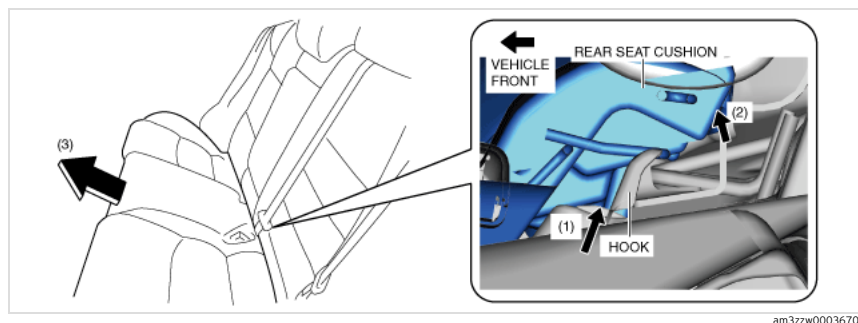

5. Install in the reverse order of removal. (See Rear Seat Cushion Installation Note ([https://am.mazdaserviceinfo.com/mazdagms3/index?page=contentresult&vin=&selectedYearRefKey=MAZDA3_2019&years=2019&models=MAZDA3\(BP\)&mWithCode=2019%20%20MAZDA3%20\(BP\)#id09130091260001](https://am.mazdaserviceinfo.com/mazdagms3/index?page=contentresult&vin=&selectedYearRefKey=MAZDA3_2019&years=2019&models=MAZDA3(BP)&mWithCode=2019%20%20MAZDA3%20(BP)#id09130091260001))).

📄 OCCUPANCY
SENSOR INSPECTIO
[(US)]

📄 POSITION MEMO
CONTROL MODULE
INSPECTION [(US)]

📄 POSITION MEMO
CONTROL MODULE
REMOVAL/INSTALL
[(US)]

📄 POSITION MEMO

Rear Seat Cushion Installation Note

- After installing the rear seat cushion, place the rear buckles at the positions shown in the figure.

