

AIR BAG SYSTEM LOCATION INDEX [TWO-STEP DEPLOYMENT CONTROL SYSTEM]


SM2743772

id0810b1805300

Note

- The SRS air bag system can be identified by whether or not the seat track position sensor is present.
 - Standard deployment control system: Without seat track position sensor
 - Two-step deployment control system: With seat track position sensor

Structural View

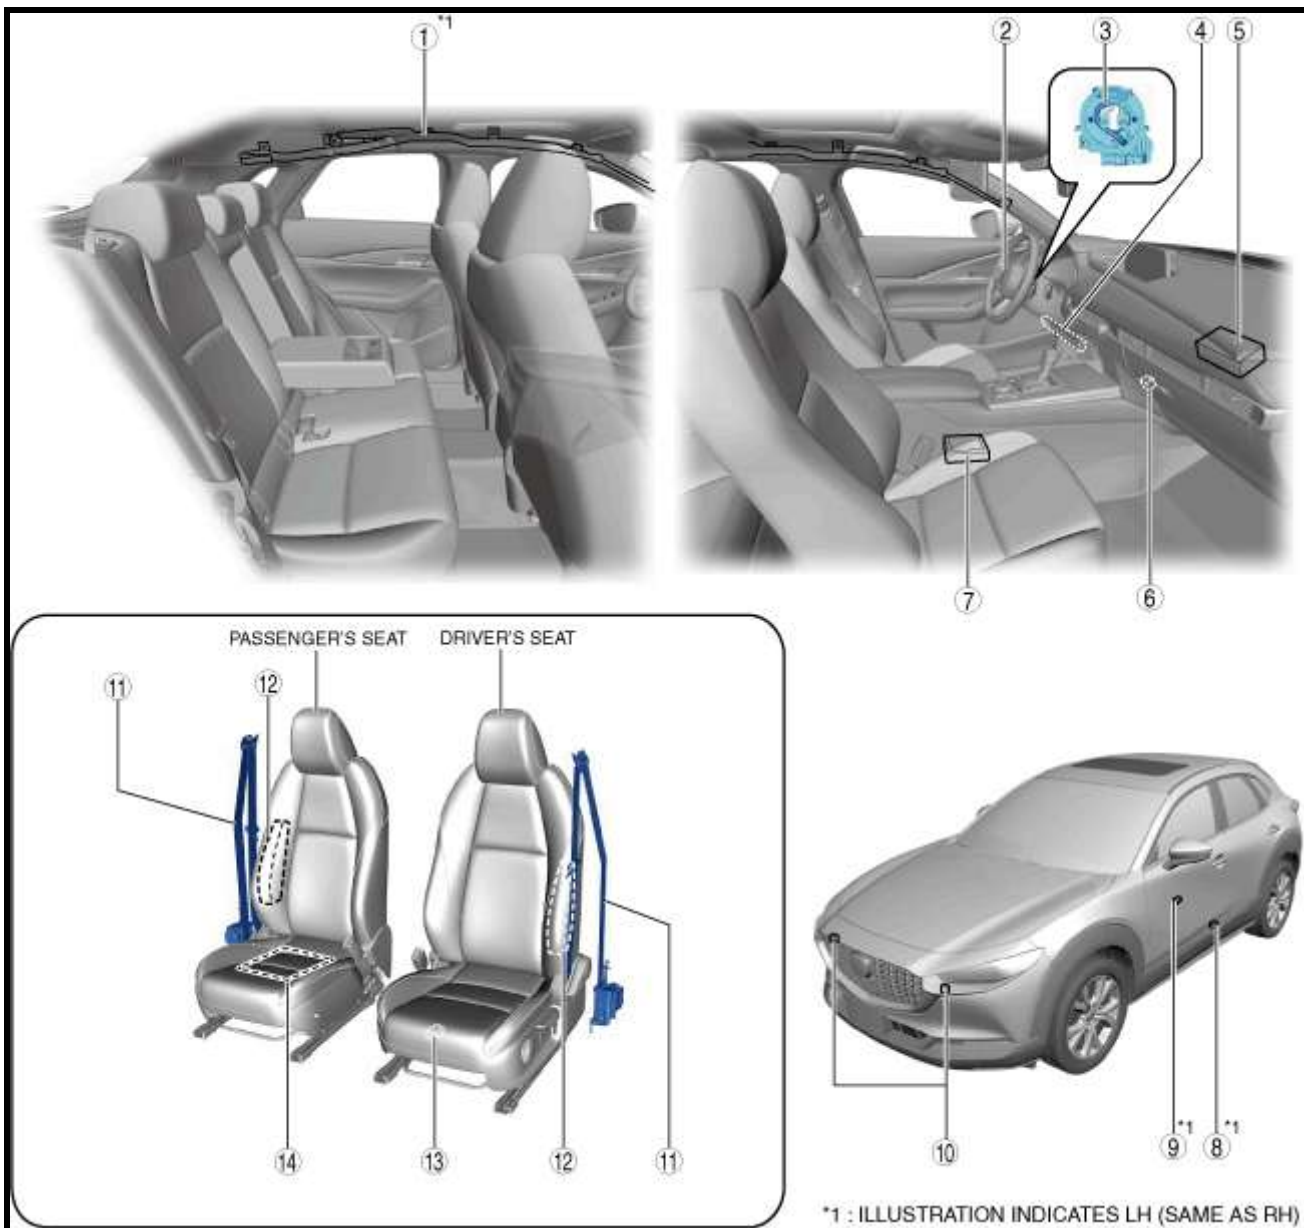


ac30zw00005630

1	<p>Curtain air bag module (See CURTAIN AIR BAG MODULE REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743758.html).) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743760.html).)</p>
2	<p>Driver-side air bag module (See DRIVER-SIDE AIR BAG MODULE REMOVAL [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743773.html).) (See DRIVER-SIDE AIR BAG MODULE INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743774.html).) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743760.html).)</p>
3	<p>Clock spring (See CLOCK SPRING REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743763.html).) (See CLOCK SPRING ADJUSTMENT [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743764.html).) (See CLOCK SPRING INSPECTION [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743765.html).)</p>
4	<p>Knee air bag module (See KNEE AIR BAG MODULE REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743776.html).) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743760.html).)</p>
5	<p>Passenger-side air bag module (See PASSENGER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743762.html).) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743760.html).)</p>
6	<p>Passenger air bag deactivation (PAD) switch (See PASSENGER AIR BAG DEACTIVATION (PAD) SWITCH REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743770.html).) (See PASSENGER AIR BAG DEACTIVATION (PAD) SWITCH INSPECTION [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743769.html).)</p>
7	<p>SAS control module (See SAS CONTROL MODULE REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2759619.html).)</p>
8	<p>Side air bag sensor (See SIDE AIR BAG SENSOR REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743771.html).)</p>
9	<p>Pressure sensor (See PRESSURE SENSOR REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743775.html).)</p>
10	<p>Crash zone sensor (See CRASH ZONE SENSOR REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743756.html).)</p>
11	<p>Front pre-tensioner seat belt (See FRONT SEAT BELT REMOVAL/INSTALLATION (SM2743781.html).) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743760.html).)</p>
12	<p>Side air bag module (See SIDE AIR BAG MODULE REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743757.html).) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743760.html).)</p>

13 Seat track position sensor
(See SEAT TRACK POSITION SENSOR REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743768.html).)

14 Passenger-side occupancy sensor
(See PASSENGER-SIDE OCCUPANCY SENSOR INSPECTION [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM3261013.html).)

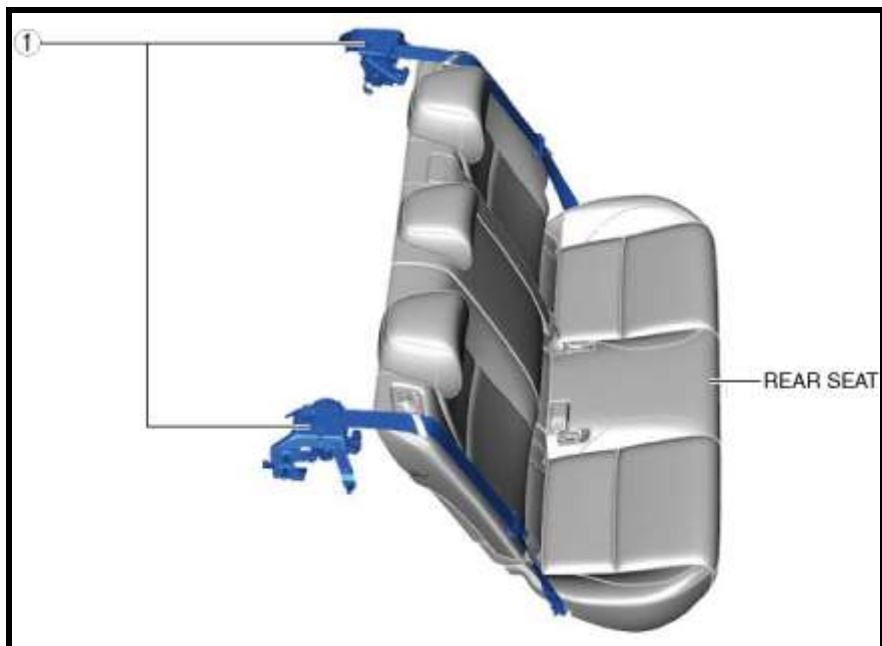

ac30zw00001774

Rear pre-tensioner seat belt
1 (See REAR SEAT BELT REMOVAL/INSTALLATION [(E)] (SM2743783.html).)
1 (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES [TWO-STEP DEPLOYMENT CONTROL SYSTEM] (SM2743760.html).)