






## Setup operation

### Wheel

#### Enter/exit

- Enter setup interface, touch Wheel icon  enter Wheel interface.
- Touch the right of the bottom icon  in Wheel interface to return setup interface.
- External steering wheel setting: The device's external steering wheel belongs to learning type and can identify all kinds of direction keys automatically. Set the steering wheel control function.
- At first, connect the steering wheel control lines of the host with the corresponding lines of the car. There are 3 lines at the back of the host, steering wheel control key 1+, steering wheel control key 2+, and steering wheel control GND. in addition, steering wheel control key 2+ is unwanted for some cars.
- Second, touch Setup icon  to enter setup interface, then touch wheel icon  to enter steering wheel control interface.

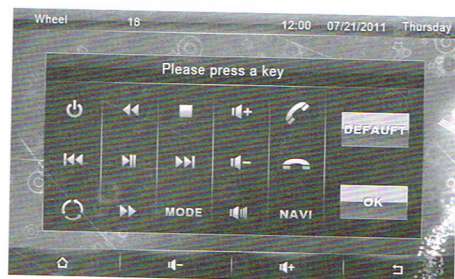

- Third, press the button on the steering wheel when touching the icon in the interface, then the screen displays "Please choose a button to pair". 1-3s later, it will displays "succeed to pair"



## Setup operation



- Forth, second, third, fourth, fifth gear till you set up all the buttons on your steering wheel.
- Fifth, touch "OK" to save and exit steering wheel control setup function.

### System

#### Enter/exit

- Enter setup interface, touch System icon  enter System interface.  
Touch the right of the bottom icon  in System interface to return setup interface.
- Adjust the saver as customer's favor. Change TV system between PAL I, PAL BG, PAL N, PAL M, SECAM DK, SECAM L, SECAM BG, SECAM I, NTSC M, and PAL D/K.
- Set up language. There are many languages, Chinese, English, Russian, Arabic, Spanish, Portuguese, French, German, Thai etc.  
Turn on/off PIP function.  
Turn on/off Reverse function Auto power on
- Switch the camera function setting between Normal and Mirror.  
Turn on/off BT auto answer on function.  
Calibrate screen  
Restore factory setting

