


ENGINE CONTROL SYSTEM WIRING DIAGRAM [MZR-CD (RF TURBO)]

B6E01020000WA9

With Calibration Resistor

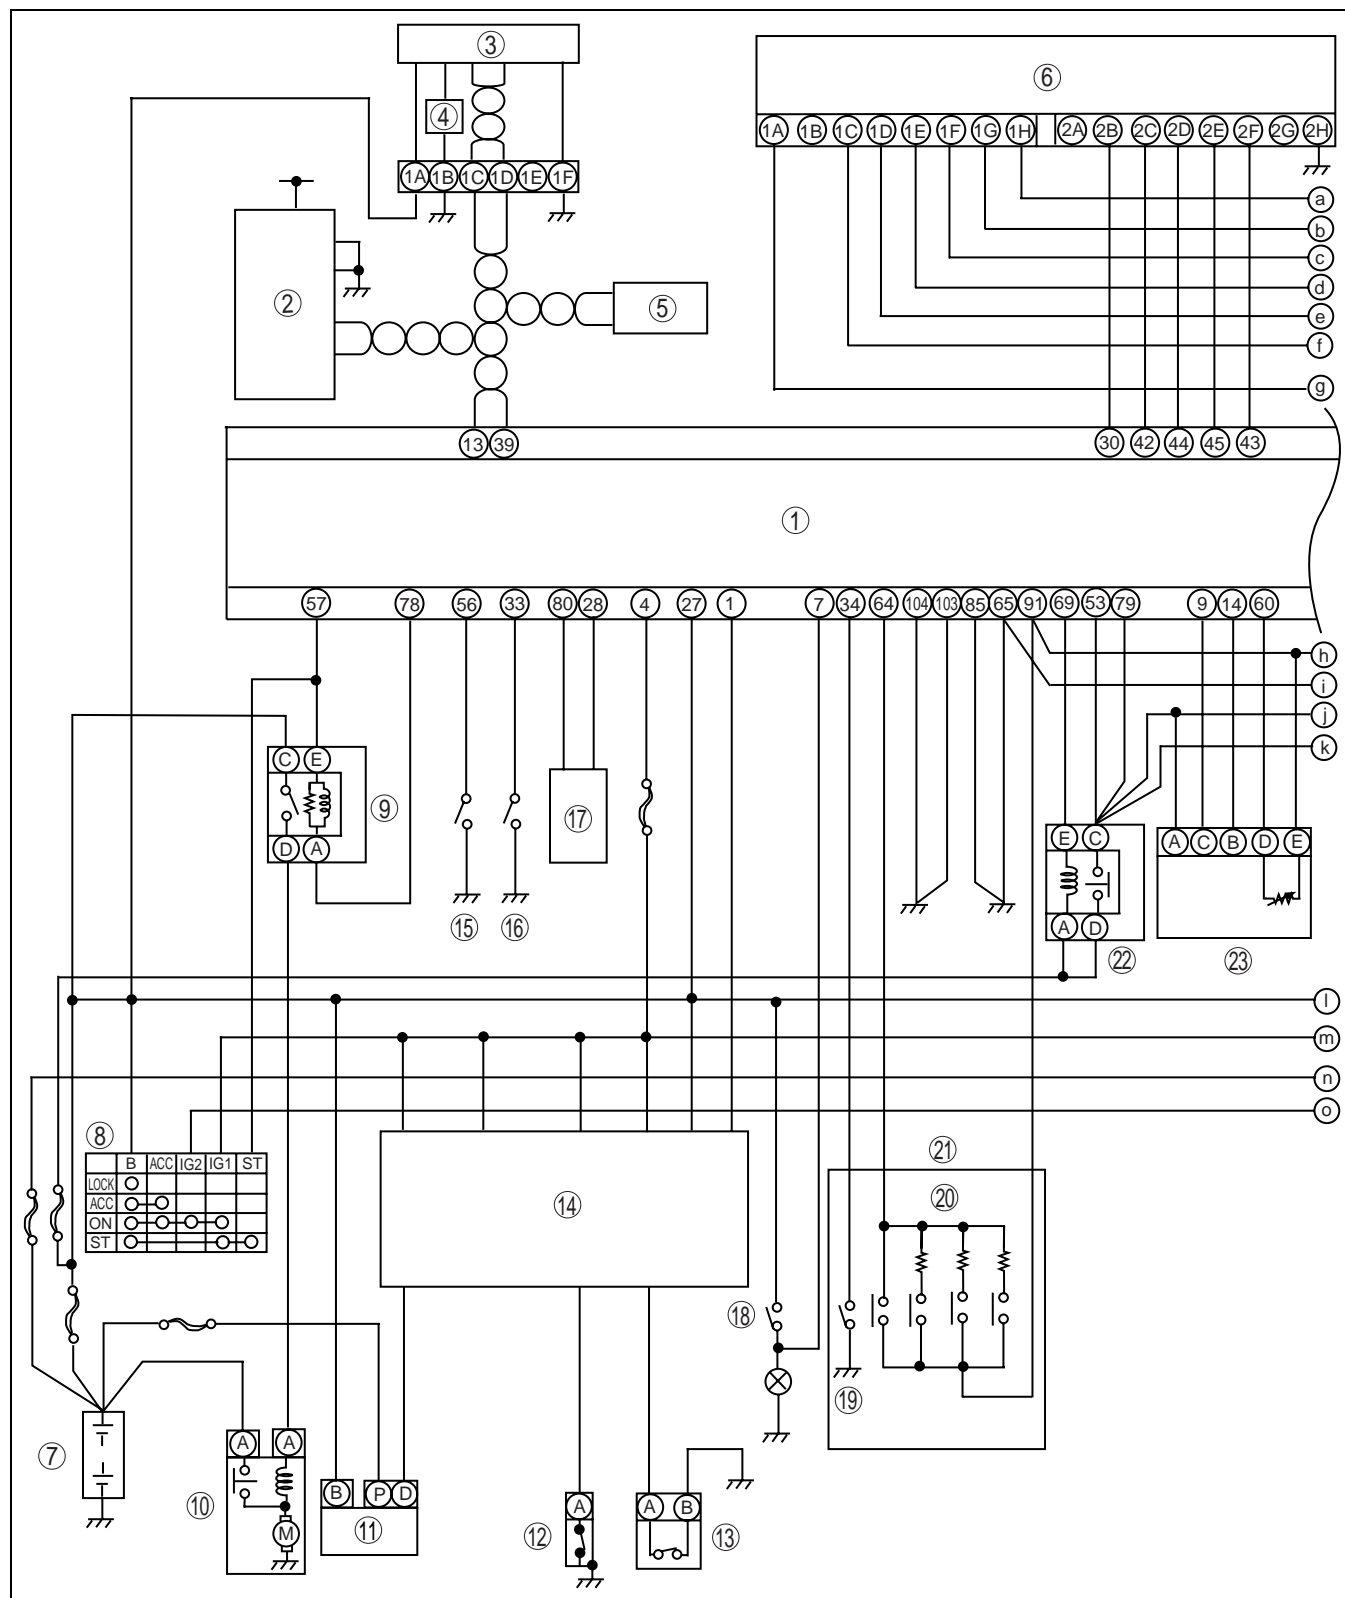


A6E40022002

1	PCM
2	DLC-2
3	Water heater unit
4	Fuel pump
5	Other unit

6	IDM
7	Battery
8	Engine switch
9	Starter relay
10	Starter

11	Generator
12	Oil pressure switch
13	Sedimentor switch
14	Instrument cluster
15	Neutral switch
16	Clutch switch
17	Coil
18	Brake switch
19	Brake switch 2
20	Cruise control switch
21	With cruise control system
22	PCM control relay
23	MAF/IAT sensor

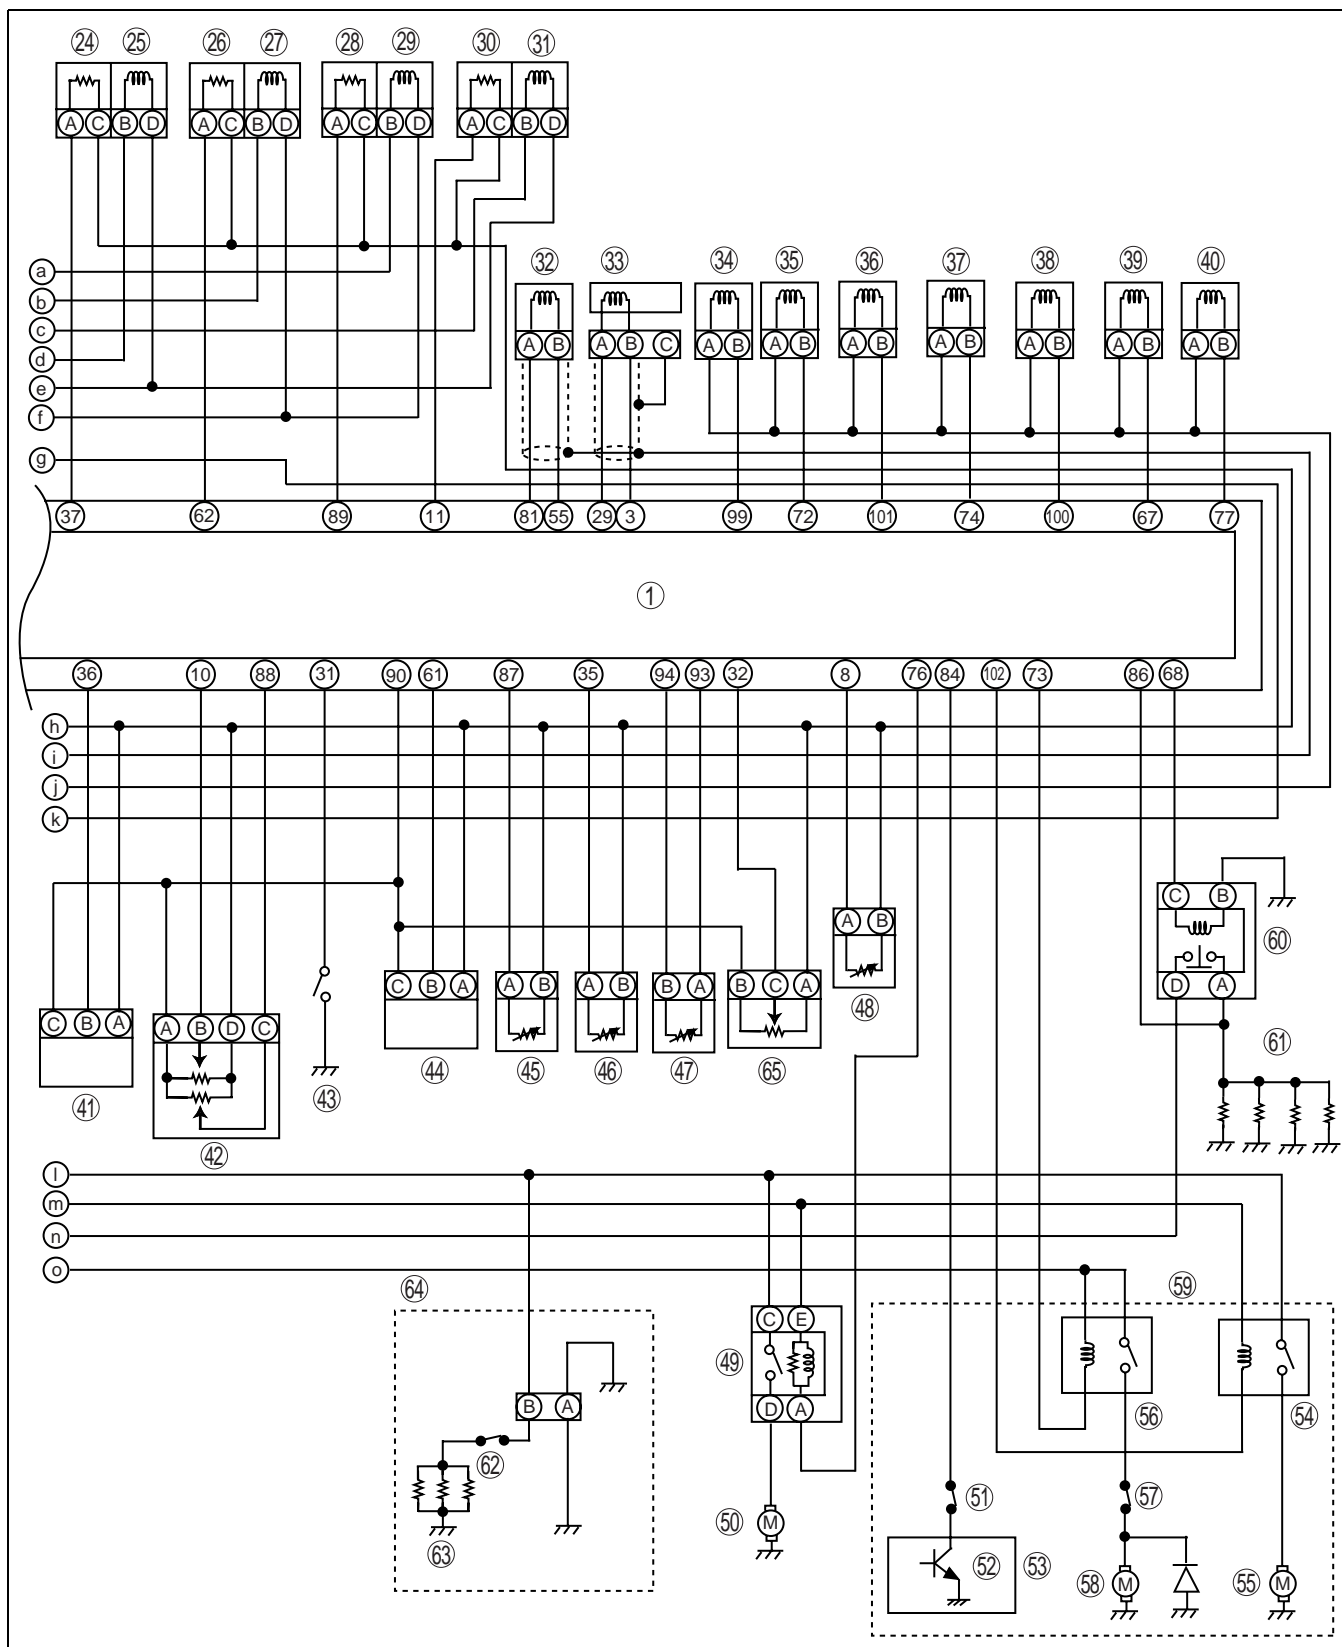


B6E4002W001

24	Calibration resistor No.1
25	Fuel injector No.1
26	Calibration resistor No.2
27	Fuel injector No.2
28	Calibration resistor No.3

29	Fuel injector No.3
30	Calibration resistor No.4
31	Fuel injector No.4
32	CMP sensor
33	CKP sensor

34	EGR solenoid valve (vacuum)
35	EGR solenoid valve (vent)
36	VSC solenoid valve
37	Intake shutter solenoid valve (half)
38	Intake shutter solenoid valve (full)
39	VBC solenoid valve
40	EGR control solenoid valve
41	Boost sensor
42	APP sensor
43	Idle switch
44	Fuel pressure sensor
45	ECT sensor
46	Fuel temperature sensor
47	Suction control valve
48	IAT sensor No.2
49	Cooling fan relay No.2
50	Cooling fan No.1
51	Refrigerant pressure switch (middle)
52	A/C switch
53	A/C amplifier
54	Cooling fan relay No.1
55	Cooling fan No.2
56	A/C relay
57	Refrigerant pressure switch (HI and LO)
58	Magnetic clutch
59	With A/C
60	Glow plug relay
61	Glow plug
62	Vacuum switch
63	Fuel warmer
64	With fuel warmer
65	EGR valve position sensor

Without Calibration Resistor

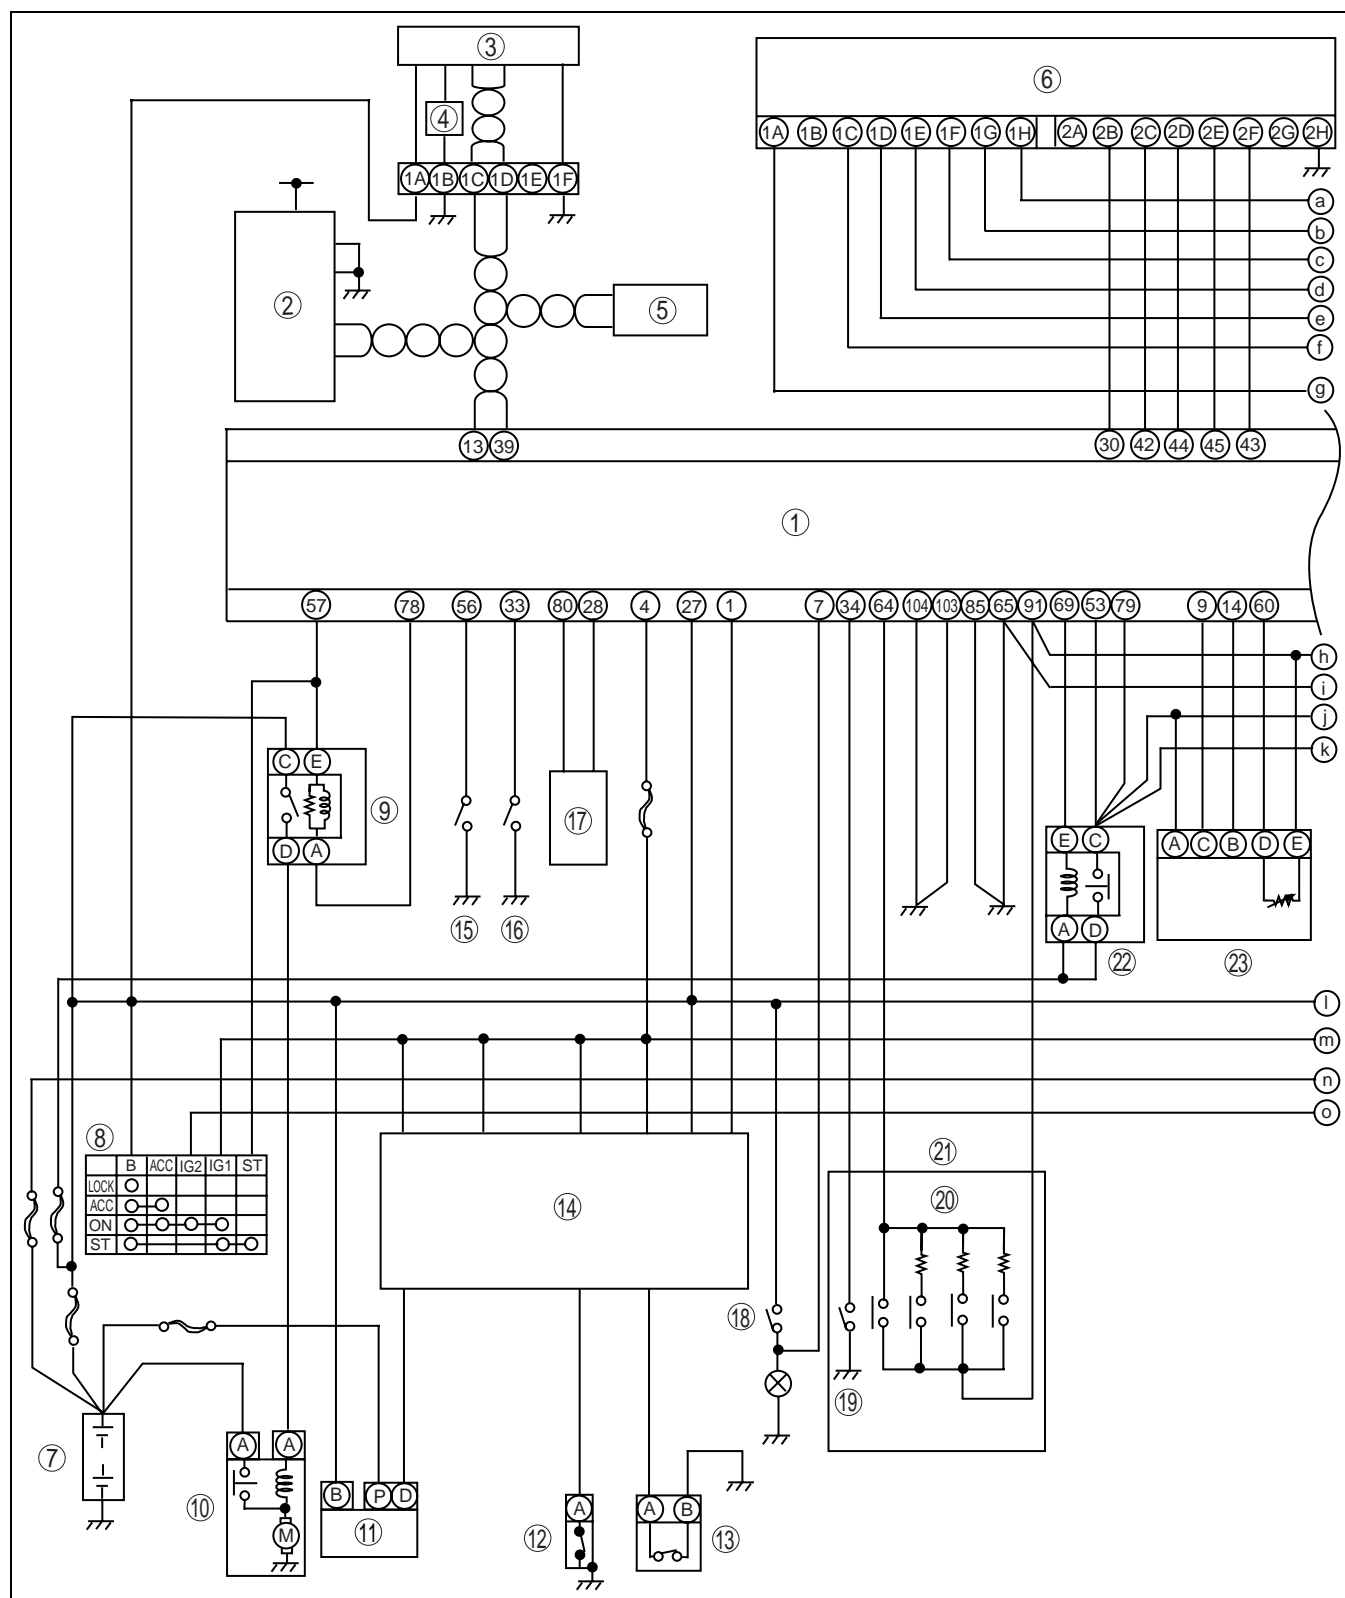


A6E40022002

1	PCM
2	DLC-2
3	Water heater unit
4	Fuel pump
5	Other unit
6	IDM

7	Battery
8	Engine switch
9	Starter relay
10	Starter
11	Generator
12	Oil pressure switch

13	Sedimentor switch
14	Instrument cluster
15	Neutral switch
16	Clutch switch
17	Coil
18	Brake switch
19	Brake switch 2
20	Cruise control switch
21	With cruise control system
22	PCM control relay
23	MAF/IAT sensor

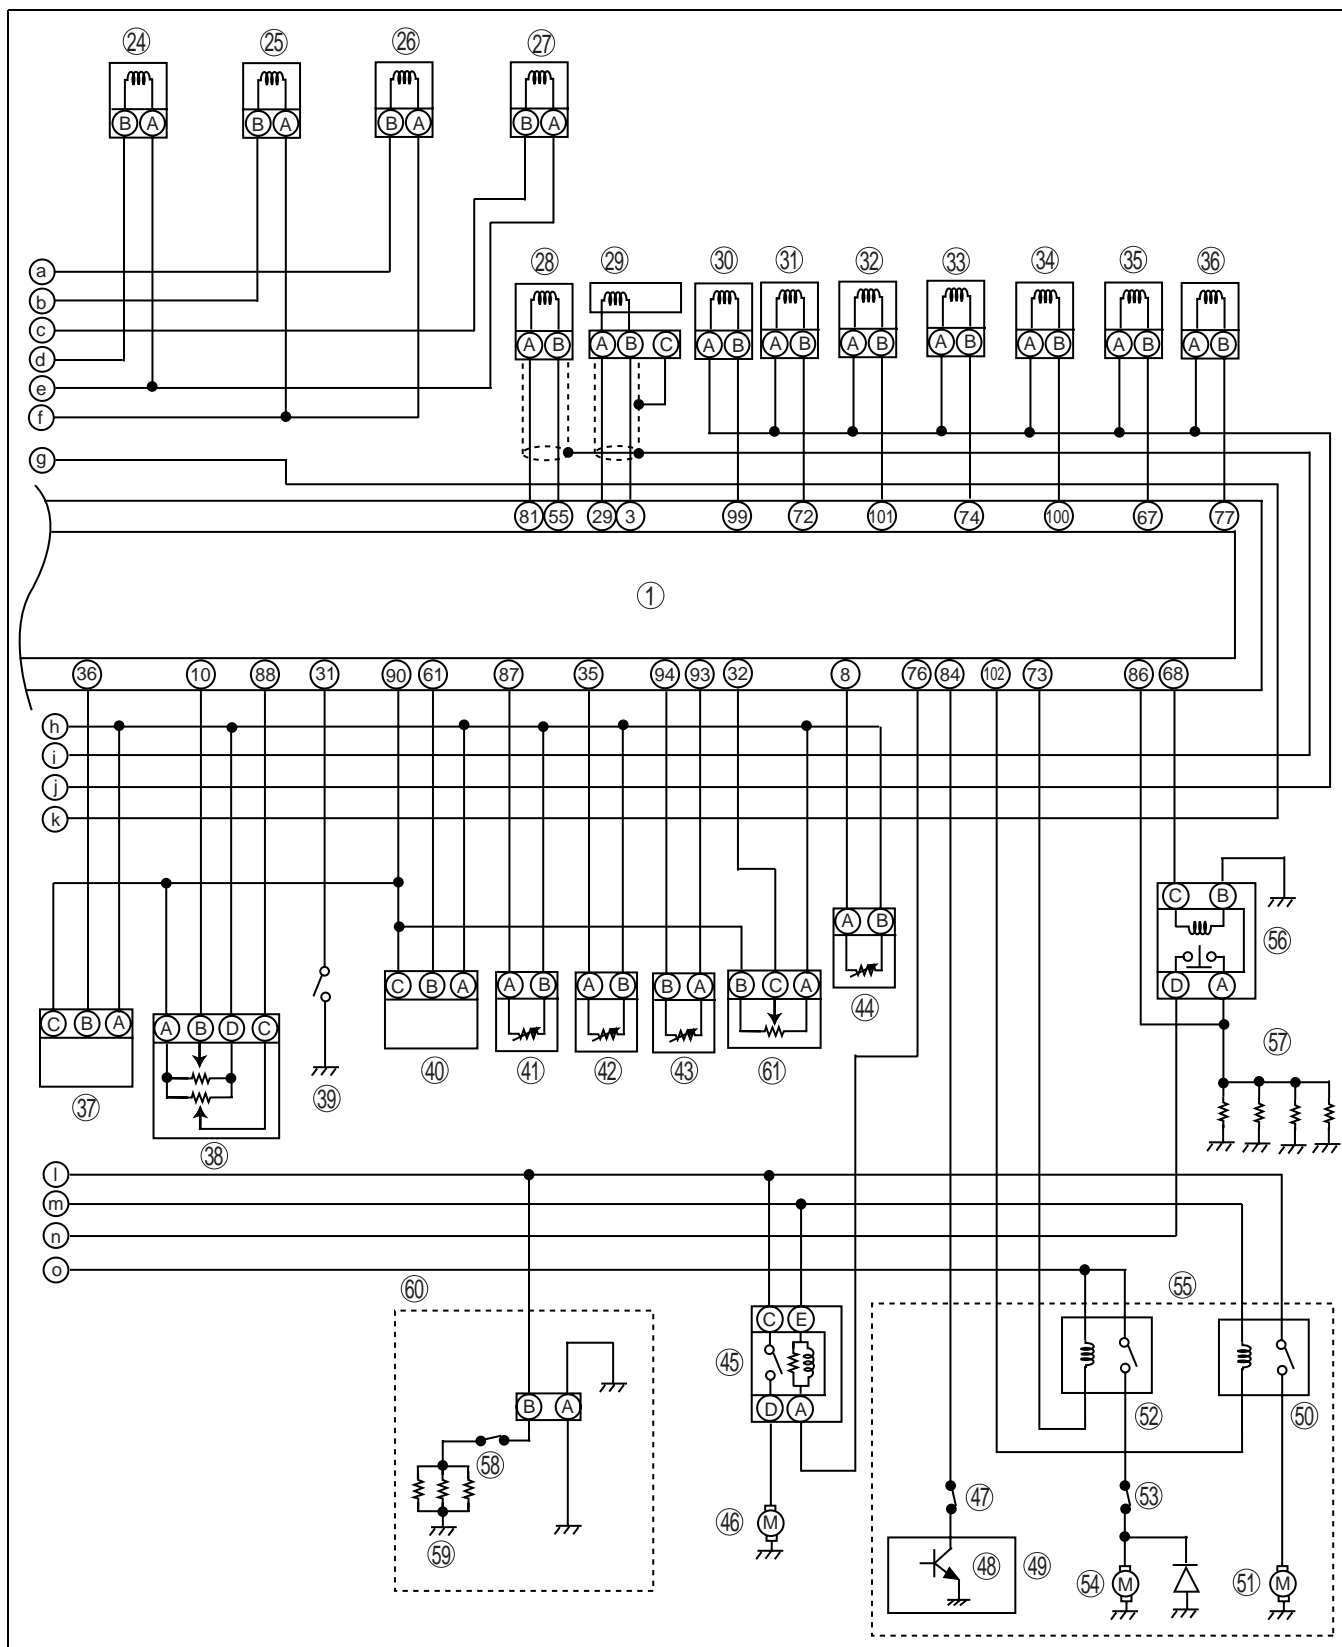

B6E102CLC001

24	Fuel injector No.1
25	Fuel injector No.2
26	Fuel injector No.3
27	Fuel injector No.4
28	CMP sensor

29	CKP sensor
30	EGR solenoid valve (vacuum)
31	EGR solenoid valve (vent)
32	VSC solenoid valve
33	Intake shutter solenoid valve (half)

34	Intake shutter solenoid valve (full)
35	VBC solenoid valve
36	EGR control solenoid valve
37	Boost sensor
38	APP sensor
39	Idle switch
40	Fuel pressure sensor
41	ECT sensor
42	Fuel temperature sensor
43	Suction control valve
44	IAT sensor No.2
45	Cooling fan relay No.2
46	Cooling fan No.1
47	Refrigerant pressure switch (middle)
48	A/C switch
49	A/C amplifier
50	Cooling fan relay No.1
51	Cooling fan No.2
52	A/C relay
53	Refrigerant pressure switch (HI and LO)
54	Magnetic clutch
55	With A/C
56	Glow plug relay
57	Glow plug
58	Vacuum switch
59	Fuel warmer
60	With fuel warmer
61	EGR valve position sensor