


LOCATION INDEX

CONTROL SYSTEM

A6E390001074W02

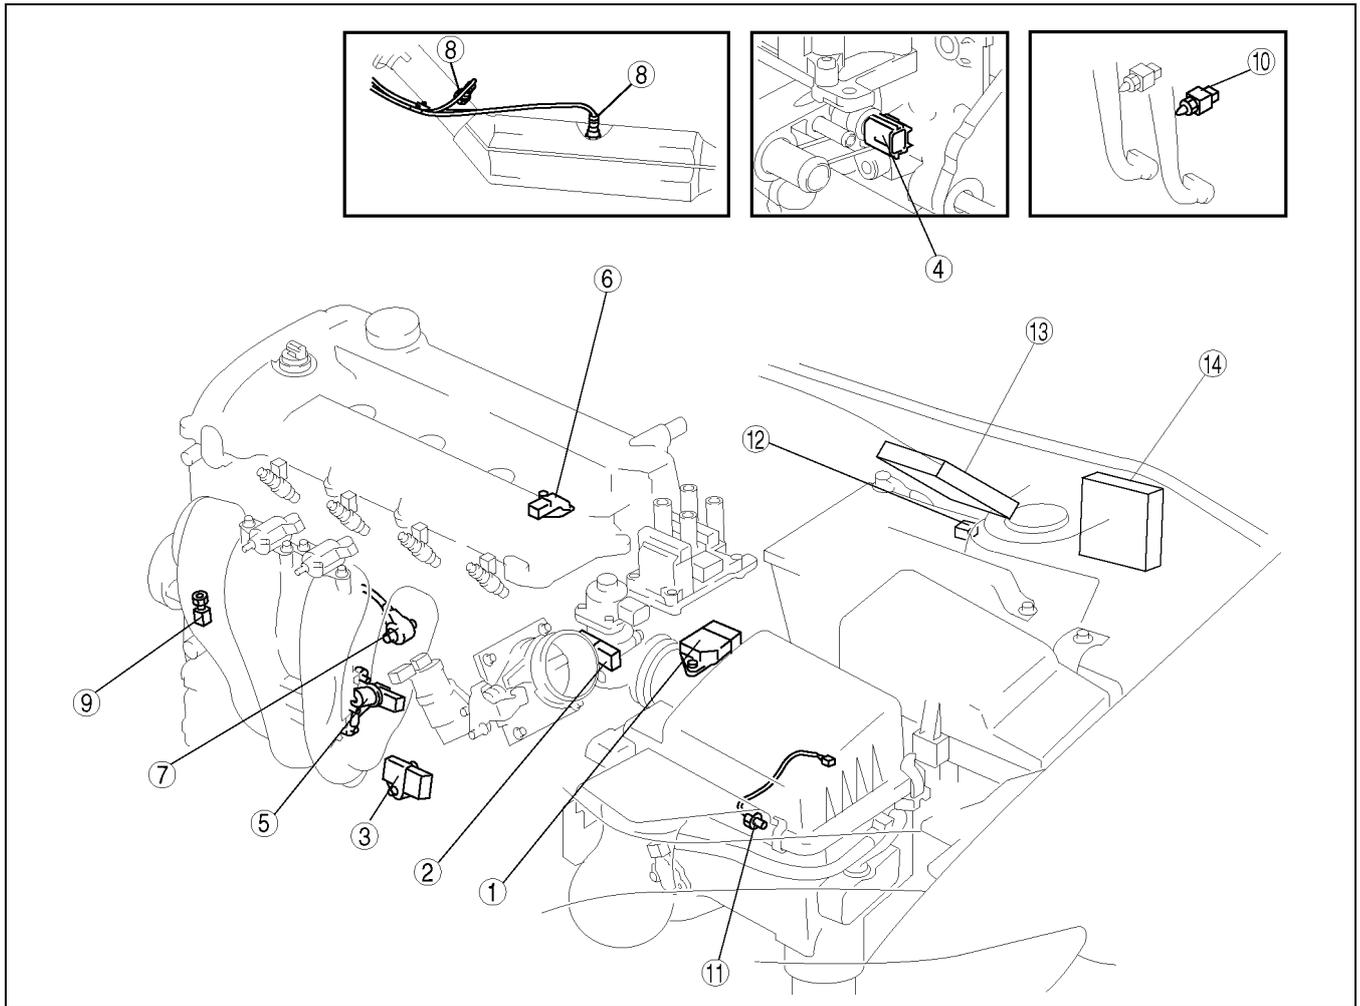

A6E3940W500

1	MAF/IAT sensor (See F-50 INTAKE AIR TEMPERATURE (IAT) SENSOR INSPECTION) (See F-51 MASS AIR FLOW (MAF) SENSOR INSPECTION)
2	TP sensor (See F-51 THROTTLE POSITION (TP) SENSOR INSPECTION)
3	MAP sensor (See F-52 MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR INSPECTION)
4	ECT sensor (See F-53 ENGINE COOLANT TEMPERATURE (ECT) SENSOR REMOVAL/INSTALLATION) (See F-53 ENGINE COOLANT TEMPERATURE (ECT) SENSOR INSPECTION)
5	CKP sensor (See F-54 CRANKSHAFT POSITION (CKP) SENSOR INSPECTION) (See F-54 CRANKSHAFT POSITION (CKP) SENSOR REMOVAL/INSTALLATION)
6	CMP sensor (See F-55 CAMSHAFT POSITION (CMP) SENSOR INSPECTION)

7	Knock sensor (See F-56 KNOCK SENSOR INSPECTION) (See F-56 KNOCK SENSOR REMOVAL/INSTALLATION)
8	Heated oxygen sensor (See F-56 HEATED OXYGEN SENSOR (HO2S) INSPECTION)
9	PSP switch (See F-58 POWER STEERING PRESSURE (PSP) SWITCH INSPECTION)
10	Clutch switch (See F-59 CLUTCH SWITCH INSPECTION)
11	Neutral switch (See F-59 NEUTRAL SWITCH INSPECTION)
12	BARO sensor (See F-60 BAROMETRIC PRESSURE (BARO) SENSOR INSPECTION)
13	PCM (U.K. specs.) (See F-43 PCM REMOVAL/INSTALLATION) (See F-45 PCM INSPECTION) (See F-50 PCM CONFIGURATION)
14	PCM (L.H.D.) (See F-43 PCM REMOVAL/INSTALLATION) (See F-45 PCM INSPECTION) (See F-50 PCM CONFIGURATION)

F